

Limited Warranty

Secutron warrants that for a period of five years from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, Secutron shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Secutron such as, lightning, excessive voltage, mechanical shock, water damage or damage arising out of abuse, alteration or improper application of the product.

The foregoing warranty shall apply only to the original buyer, and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Secutron. This warranty contains the entire warranty. Secutron neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Secutron be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

Important!

Secutron recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to but not limited to criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.



Secutron Inc.
25 Interchange Way
Vaughan, Ontario, Canada
L4K 5W3

Tel: (905) 695-3545
Fax: (905) 660-4113
www.secutron.com

60 Industrial Parkway
Cheektowaga, NY, 14227
Tel: 1-888-SECUTRON
Fax: 888-660-4113

INSTALLATION INSTRUCTION


MR-2602A/2605A Class A Zone Input Module

The MR-2602A Zone Input module converts the two zones on the MR-2602 fire alarm control panel from Class 'B' Style 'B' to Class 'A' Style 'D'. The MR-2605A Zone Input module converts the five zones on the MR-2605 fire alarm control panel from Class 'B' Style 'B' to Class 'A' Style 'D'.

SPECIFICATIONS

- Voltage: 24 Vdc (nom)
- Standby current: MR-2602A ... 2 mA, MR-2605A ... 5 mA
- Alarm current: 60 mA (max)
- Loop Resistance: 100 W (max)
- Devices per zone: 20 @ 100mA each

NOTE: This component must be included in the control panel battery calculation. Refer to the Standby Battery Calculation Sheet (PN# 29005850) included with the control panel.

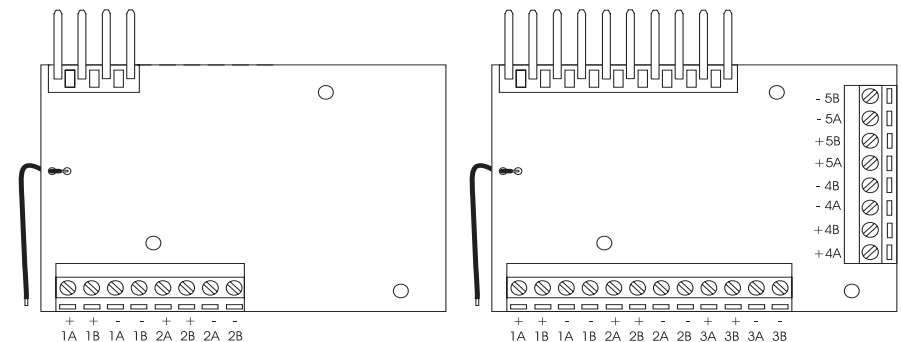

MR-2602A

MR-2605A

INSTALLATION

The MR-2602A/2605A module mounts in the corresponding MR-2602/2605 fire alarm back box. Refer to Figure 1.

1. Place the supplied spacers (2) on the pem studs.
2. Insert the module header pins into the corresponding Class 'B' zone terminals on the main board.
3. Secure the module to the the studs with the nuts provided (2).
4. Connect the electrical common wire on the module to the 'COM' terminal on the main panel.
5. Tighten all zone terminal screws to ensure reliable electrical connections between the main panel and the MR2602A/2605A module.

NOTE

Refer to the MR-2602 or MR-2605 *Installation Manual* for instructions on zone programming, and mixing smoke detectors and contact alarm initiating devices on the same zone.

Figure 1 Typical Class A, Style D zone wiring

